

Installation Step I. Preparation


Note: As with any shape and tape installation, it is crucial that the floor be prepared properly, and is as clean and dry as possible.



Remove all old tape adhesive and/or chipped paint completely from the floor surface.



Clean floor surfaces using A CLEANER CONTAINING NO CHLORINE OR CITRUS CLEANERS - Chlorine has a tendency of leaving a haze on the floor, making it difficult for any adhesive to stick effectively. Citrus cleaners can leave oily residue which inhibits adhesion.

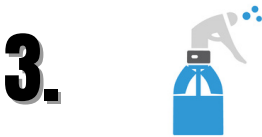

If you are required to use a degreaser on the floor, please remove / wash off the degreaser prior to applying the GEToolbox® floor marking tape. Use the GEToolbox® surface cleaner!



Allow floor surfaces to dry completely and wait at least 15 minutes before applying GEToolbox® products.



Once the floor is dried properly, you may apply GEToolbox® Floor Markers, Floor Marking Tapes or Floor Signs where needed.

